



# Menubaum und DMX Chart

## Eventpro LEDmover 324

### Menubaum

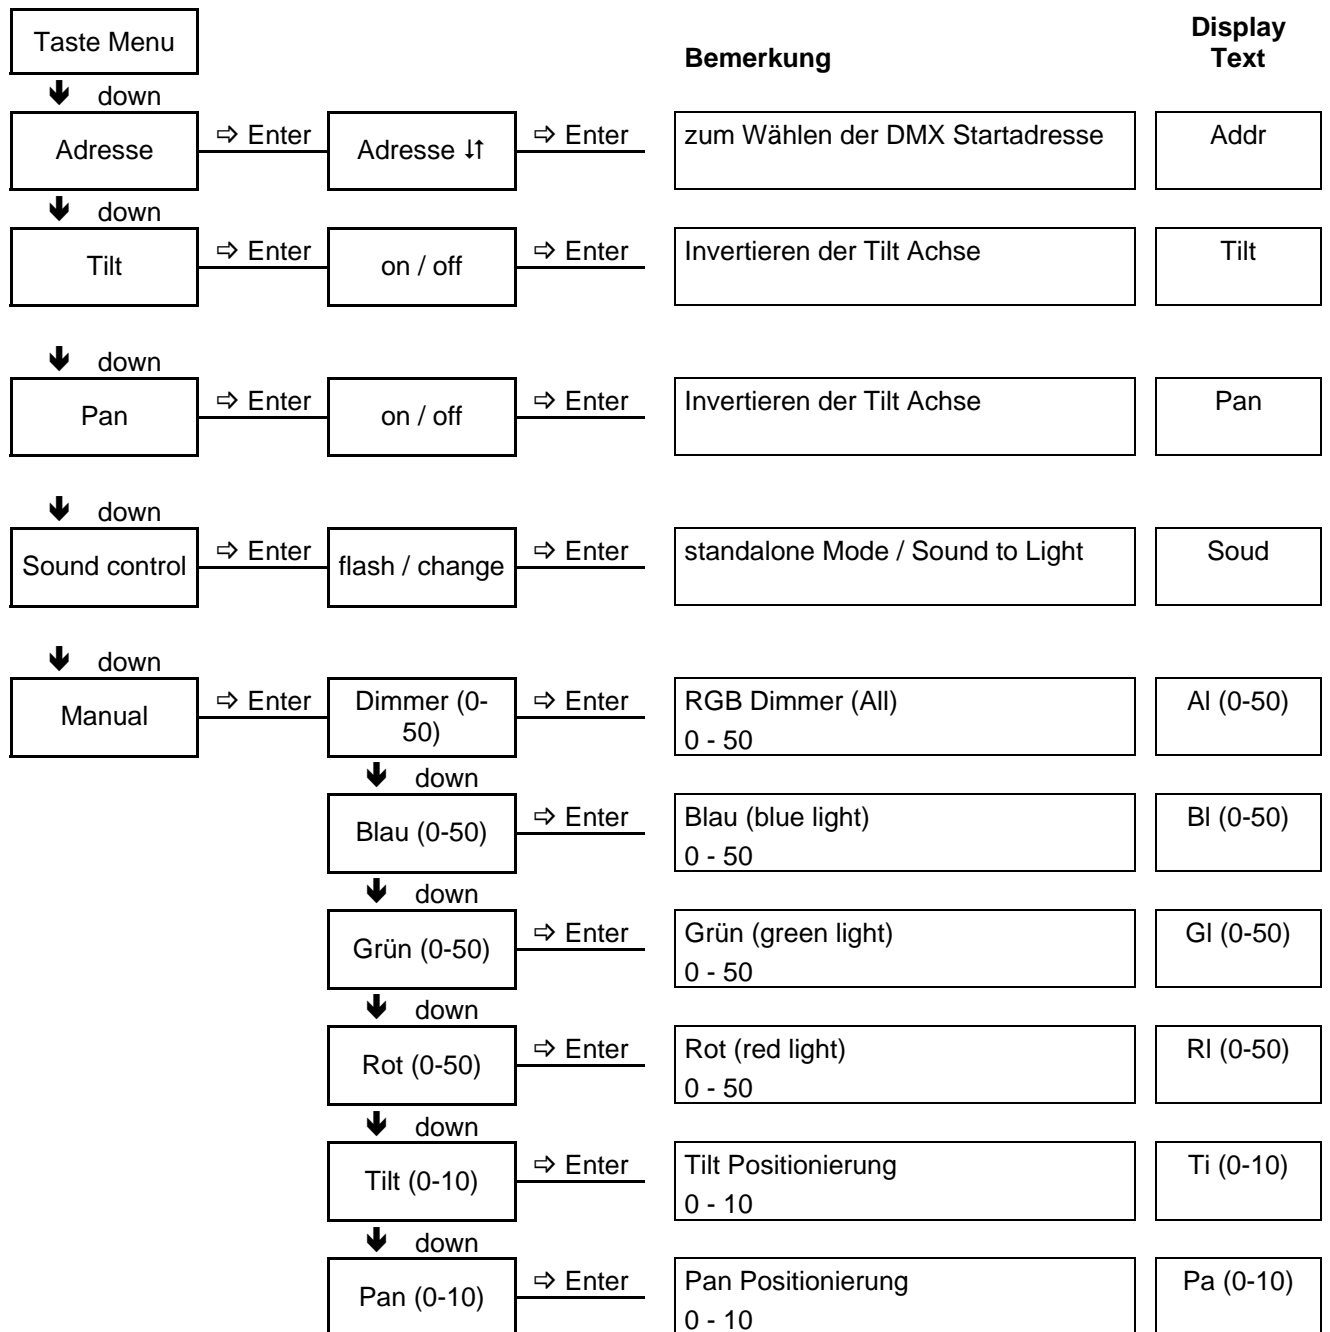

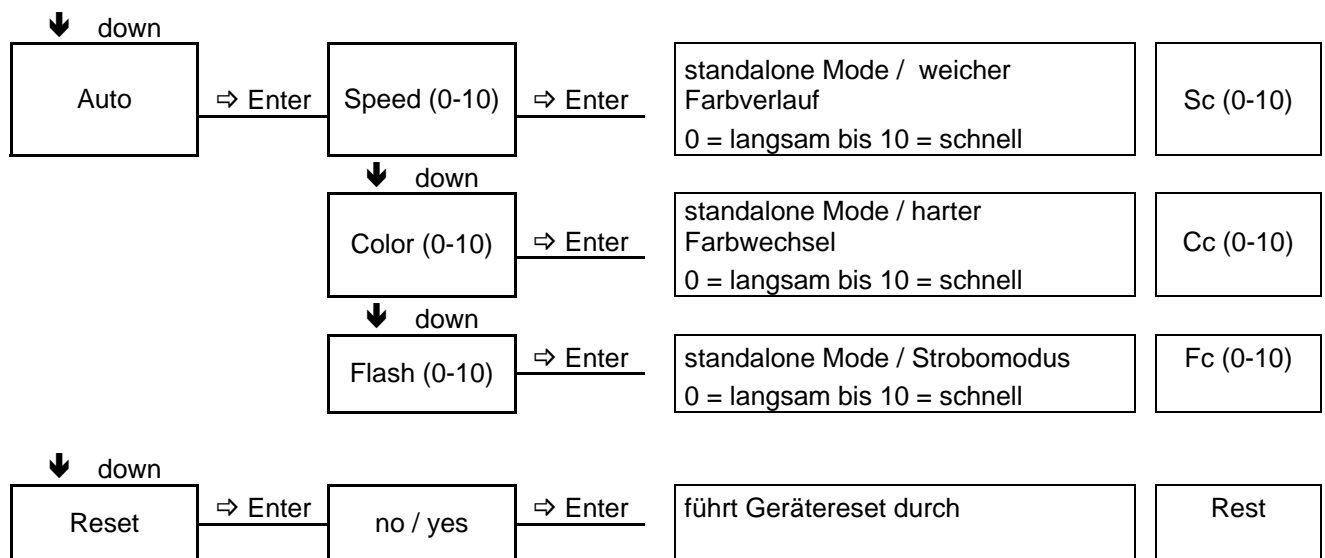

### DMX Kanallayout

Kanal	Funktion	DMX
1	<b>Dimmer Shutter</b> Dimmer 0 - 100% Strobe langsam-schnell Shutter offen	000-127 128-200 201-255
2	<b>Rot</b> 0 - 100%	000-255
3	<b>Grün</b> 0 - 100%	000-255
4	<b>Blau</b> 0 - 100%	000-255
5	<b>Pan</b>	000-255
6	<b>Tilt</b>	000-255
7	<b>Pan fine</b>	000-255
8	<b>Tilt fine</b>	000-255
9	<b>Pan und Tilt Speed</b> 100 - 0%	000-255
10	<b>Reset</b> Betrieb Reset (nach 5 Sekunden)	000-119 120-139