

DMX Chart

Eventpro LedMover HP 108x3W RGB-W

DMX Kanallayout

Kanal	Funktion	DMX
1	Dimmer Shutter Dimmer 0 - 100%	000-255
2	Rot 0 - 100%	000-255
3	Grün 0 - 100%	000-255
4	Blau 0 - 100%	000-255
5	Weiss 0 - 100%	000-255
6	Shutter 0 - 100%	000-255
7	Color Fx	000-255
8	Color Fx Speed 0 - 100%	000-255
9	Pan	000-255
10	Tilt	000-255
11	Pan fine	000-255
12	Tilt fine	000-255
13	Pan und Tilt Speed 100 - 0%	000-255
14	Reset Betrieb Reset (nach 8 Sekunden)	000 255